

User Guide: RTK Handheld Surveyor Kit

- [Overview](#)
- [Package](#)
- [Unboxing](#)
- [How to connect to your smartphone](#)
 - [How to use RTK Handheld Surveyor Kit with SW Maps?](#)
 - [How to use RTK Handheld Surveyor Kit with Mapit GIS?](#)
 - [Firstly, pair your receiver to your Android smartphone or tablet.](#)
 - [Secondly, connect your receiver to Mapit GIS via Bluetooth.](#)
 - [Thirdly, reach centimeter level accuracy.](#)
 - [How to use RTK Handheld Surveyor Kit with Other software?](#)
 - [Firstly, install GNSS Master app and enable mock location in your Android Device.](#)
 - [Secondly, connect the RTK receiver to your Android device.](#)
- [Related tutorials](#)
- [How to reset the kit to Factory settings?](#)
- [Accessories](#)
- [EU Conformity & RoHS Certificates](#)

Overview



Portable survey performance that fits your hand. Includes accessories.
With the [RTK Handheld Surveyor Kit](#) you will have everything you need to start your surveying tasks with RTK and centimeter level accuracy.

Package

You got your new [RTK Handheld Surveyor Kit](#)? Check our quick guide to start.

Remember all the component parts of this professional kit:

- ZED-F9P RTK receiver with USB and Bluetooth inside a plastic case
- [Helical antenna](#)
- USB-C cable
- USB OTG microUSB-B (14cm)
- USB OTG type C (22cm)
- Universal smartphone holder with 3M-Backed Rubber Pads, fits any smartphone from 5.3cm to 9.3cm with or without case
- Hand holder
- Velcro strap (20cm) to fix the receiver to the back of the smartphone holder

The kit is pre-configured to send NMEA data simultaneously via Bluetooth and USB.



Unboxing

For building [RTK Handheld Surveyor Kit](#), there is no need for special tools nor nothing of the sort, by hand will be enough. Check the following installation manual to start.

1. Mount the Universal smartphone holder to the hand holder. You will see that the screw end of the hand holder fits with the smartphone holder hole.





2. Mount the plastic case (ZED-F9P RTK receiver with USB and Bluetooth within) to the smartphone holder. You will find the plastic case in a small box along with the helical antenna. To do this, fit the flat edge of the case with the outer part of the smartphone holder with the SMA connector facing up, and fasten it together with the velcro strap.







3. Attach the helical antenna on top of the plastic case by screwing in the SMA connector.



4. Connect the mini USB cable to the mini USB board connector of the plastic case.



5. Place your smartphone to the Universal smartphone holder, adjusting it to the width of your phone.



6. Join the USB OTG to the mini USB cable and connect with your smartphone.



7. Now you have your new [RTK Handheld Surveyor Kit](#) built and ready to function!



8. The kit can be used for about 6-8 hours with an average phone powering.

Note: If the you need more than this, use [USB-C on-the-go \(OTG\) with external USB-C power supply](#) (optional, not included in the package) and a small external 1'000mAh powerbank.

How to connect to your smartphone

Follow our integration guide on how to use your Android device with [RTK Handheld Surveyor Kit](#).

1. Make sure your device supports Bluetooth 2.0 or has USB OTG capabilities.
2. Make sure your Android language is set to English, since some users reported compatibility problems with other languages.
3. Place your [RTK Handheld Surveyor Kit](#) in a location with **good view of the sky**, or near a window for testing the functionality.

4. Download compatible software/app which you prefer to use from Google Play and install it in your device. We prepared step-by-step instructions how to use [RTK Handheld Surveyor kit](#) with several software/app:
 - [SW Maps – GIS & Data Collector](#). Use this [link to download the app](#) from Google Play and install it in your smartphone
 - [Mapit GIS](#). Use this [link to download the app](#) from Google Play and install it in your smartphone
 - [Other app](#). The list of compatible software/app you can find [here](#).

How to use RTK Handheld Surveyor Kit with SW Maps?


CONNECTION VIA USB OTG

CONNECTION VIA BLUETOOTH


CONNECTION VIA USB OTG

The best option (if your device supports it) since you can power and communicate with it at the same time


5. Open SW Maps app and give permissions (first time only).
6. Click on the SW Maps icon to show the app menu.

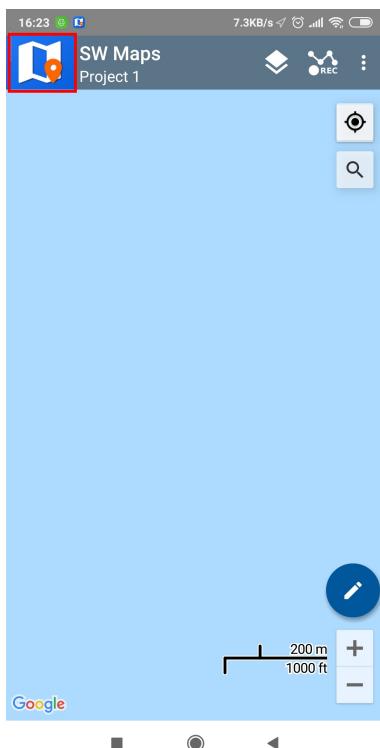

7. Select **USB Serial GPS**.

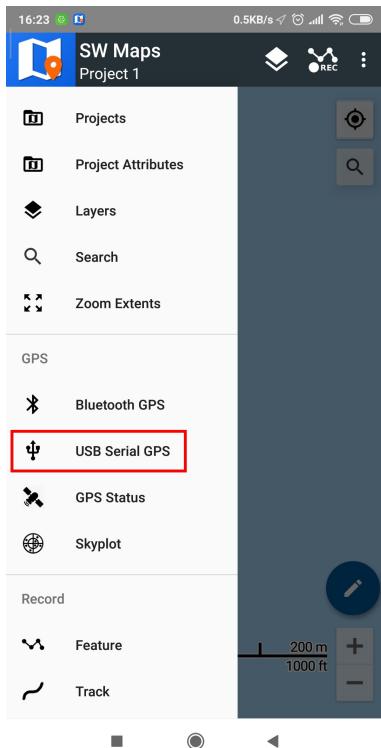


8. Under **Devices**, you should see **FT232R USB UART**. Set **BaudRate** to **115200** bps (if you ordered your Professional kit before 09.10.2023, set BaudRate to 38400 bps).
9. Set **Instrument Model** to **u-blox RTK**. Set the **Instrument Height** according to the height of your pole or antenna, if you want to measure the location of the ground.
10. Click **CONNECT** button. When you click the CONNECT button, grant permissions (if asked).

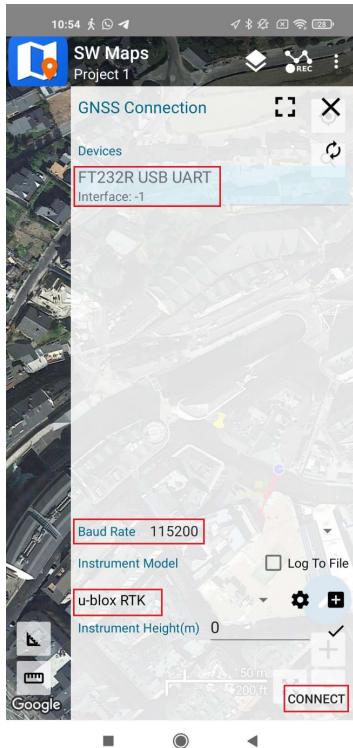


CONNECTION VIA BLUETOOTH


5. Power your ArduSimple kit using its USB connector. Use a USB power bank, power wall adapter, smartphone, laptop etc.
6. Enable the Bluetooth connection on your device.
7. Pair the ArduSimple board in the Android Bluetooth menu. When searching for devices, you may see only the MAC address, but once paired the name will update to **RTK_GNSS_XXX**, where XXX is a random number. Password is **1234**. *The pairing only needs to be done once. Unlike other Bluetooth devices, it won't show as "connected" until you click "connect" button in an app.*

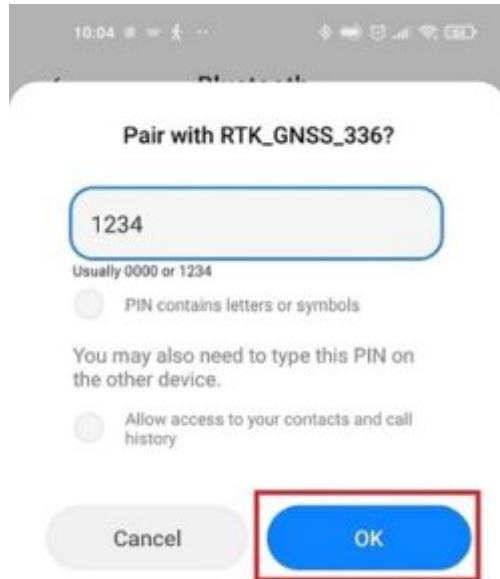


8. Open SW Maps app and give permissions (first time only). Click on the SW Maps icon to show the app menu.

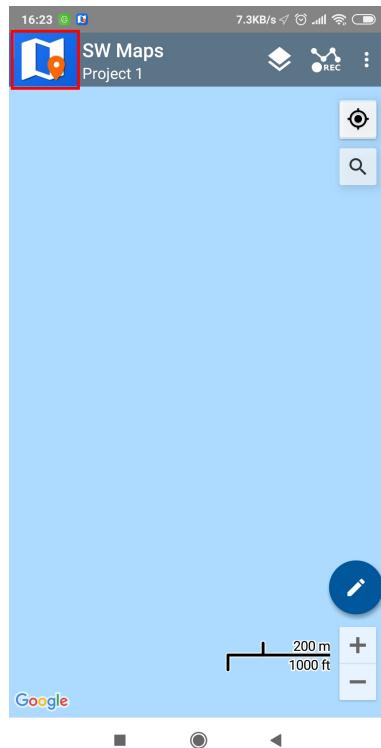


9. Select **Bluetooth GPS**.

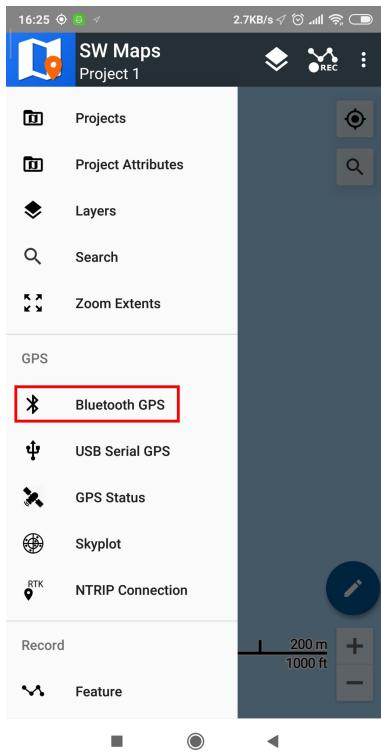


10. Under Devices, select the one you paired in step 3. Set Instrument Model to **u-blox RTK**. Click **CONNECT** button. When you click the CONNECT button, grant permissions (if asked).

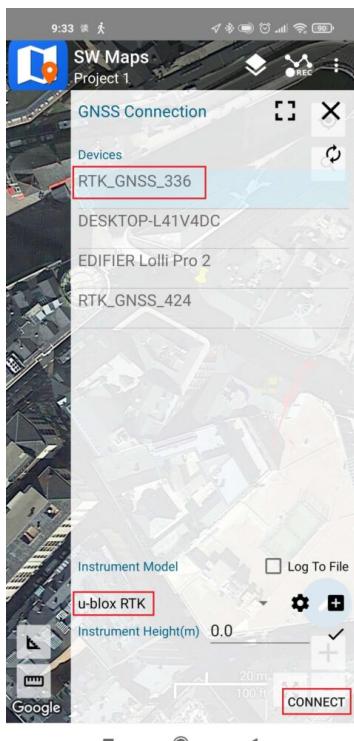


11. Since you have a RTK capable GNSS receiver, let's connect it to a NTRIP server to get cm accuracy. Go back to SW Maps menu and select **NTRIP Client**.

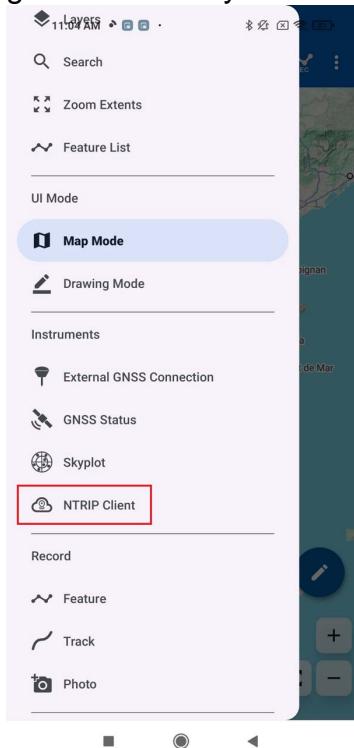


12. Fill all the fields with your NTRIP provider data. If multiple mountpoints are listed, choose the one closest to your current location for the best accuracy and performance. VRS (Virtual Reference Station) is usually a good default choice, as it provides location-adaptive correction data based on your position. Make sure to check **Send NMEA GGA to NTRIP Caster** if you are connecting to a VRS. If you do not know how to find NTRIP provider in your area, we have prepared a list of [RTK Correction Services in your Country](#), check the page to find suitable service for you.

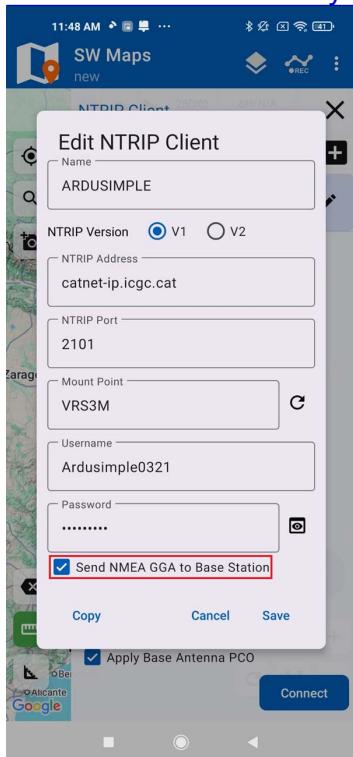

13. When you click **CONNECT**, if everything worked, you will see the data stream alive.

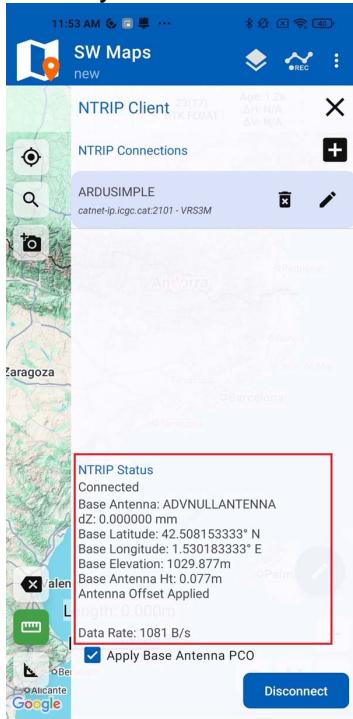


14. Go to the SW Maps menu and select **Skyplot**. You can see the current UTC time, Lat/Long, and the current location.

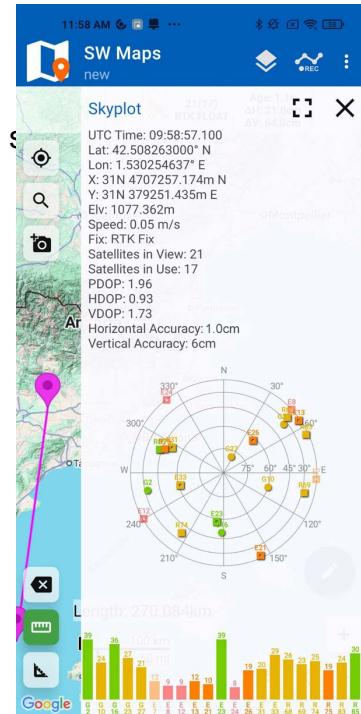

or RTK Fix and actual position with centimeter accuracy.

15. You can click the button that is highlighted in red to make the app center the map in your receiver location. The pointer showing your location will change its color

depending on the fix status of your device, you have the option to adjust the map layer, include points of interest or export recorded

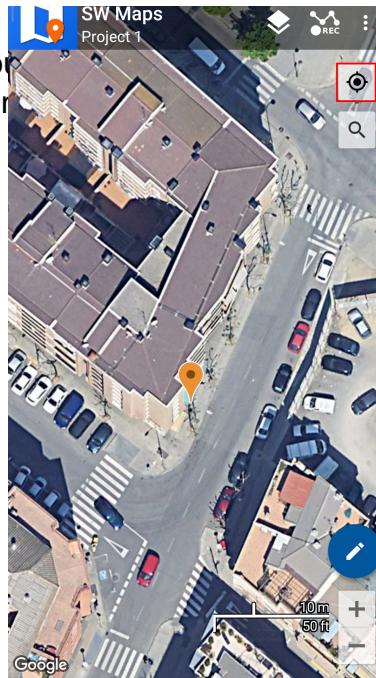

locations, among other features.

16. You can get used to the SW Maps app by exploring its various options. If you prefer a guide, you can access the [User Manual here](#).


How to use RTK Handheld Surveyor Kit with Mapit GIS?

Firstly, pair your receiver to your Android smartphone or tablet.

1. Power your RTK receiver by connecting USB cable to the power supply (smartphone/tablet/ compatible powerbank). If you get any pop-up message to connect the USB device with any app, you can ignore it.
2. Enable the Bluetooth of your smartphone or tablet, and pair it with your RTK receiver.

When pairing your device, notice that it will appear as RTK_GNSS_***. The password is always 1234.


The pairing only needs to be done once. Unlike other Bluetooth devices, it won't show as "connected" until you click "connect" button in an app.

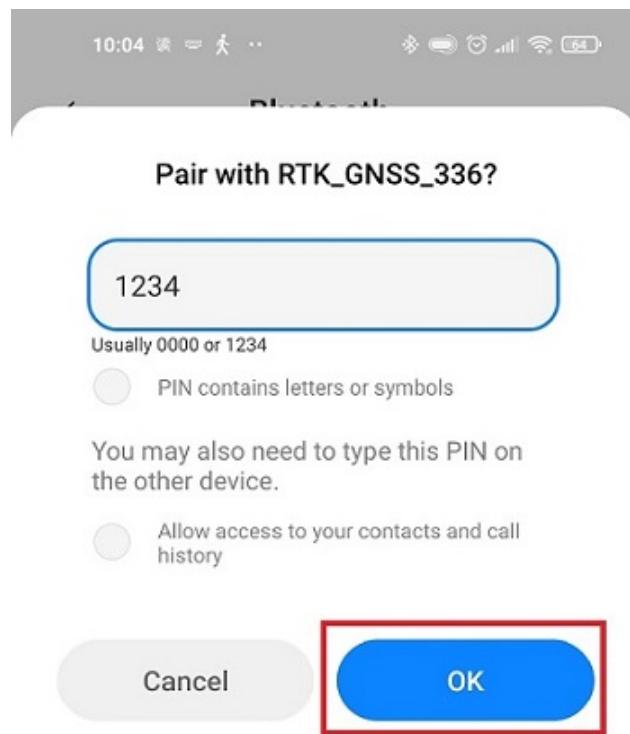


3. Place RTK antenna in a location with good view of the sky or near a window for testing the functionality.

Secondly, connect your receiver to Mapit GIS via Bluetooth.


4. Open [Mapit GIS](#). Go to **Settings**. Tap on **External GNSS**.

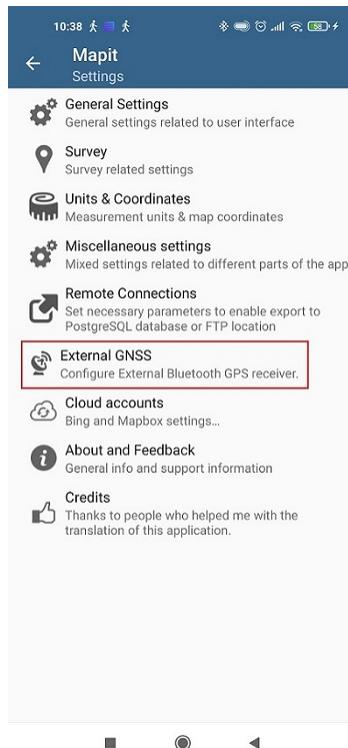


5. Enable Direct Connection to External GNSS.

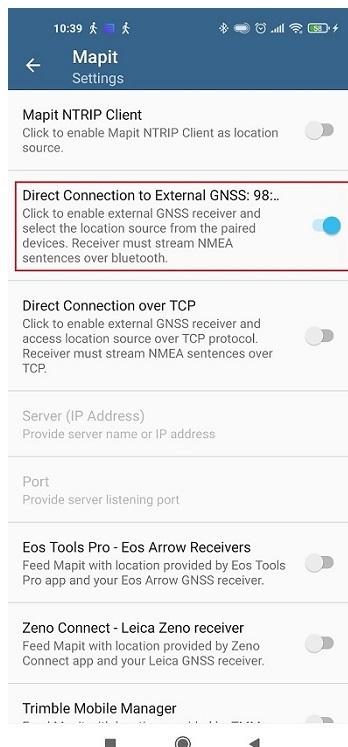

6. In the pop-up window choose the device you paired in step 2.

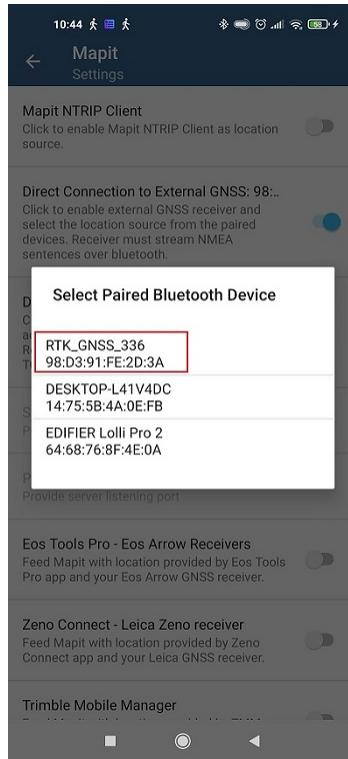

7. Back to the main screen, tap on the **antenna icon** you will see you are using External GNSS and with location and satellites information.

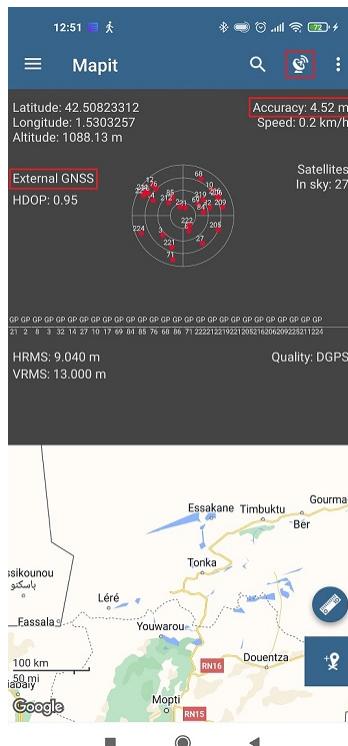

Thirdly, reach centimeter level accuracy.

In step 6, we can see the accuracy is not satisfactory yet. Because RTK receiver will need a base station or a correction service to reach centimeter level accuracy.


There is a build in NTRIP Client function in Mapit GIS, but it is not compatible with new Android version and it is not free. If it doesn't work on your android device don't worry, we have alternative GNSS Master app to overcome this limitation.

NTRIP Client function in Mapit

GNSS Master app

NTRIP Client function in Mapit

8. In the menu tap **NTRIP Client** and set your corrections.

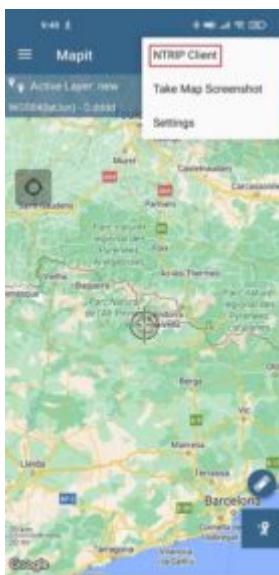


GNSS Master app

8. GNSS Master app has built in NTRIP and PointPerfect capability to send corrections directly to your GNSS receiver.

“Mock Location” is a functionality of Android OS that allows you to “fake” the position of the internal GPS, and use instead the position of your fancy external RTK GNSS receiver. By using Mock location, you can receive centimeter accuracy on MapitGIS.

Follow ArduSimple tutorial [How to use centimeter GPS with any Android app \(mock location\)](#) to enable correction service on GNSS Master app and use mock location on MapitGIS.

9. After accessing to NTRIP correction service you can see in MapitGIS that the accuracy is at the centimeter level.

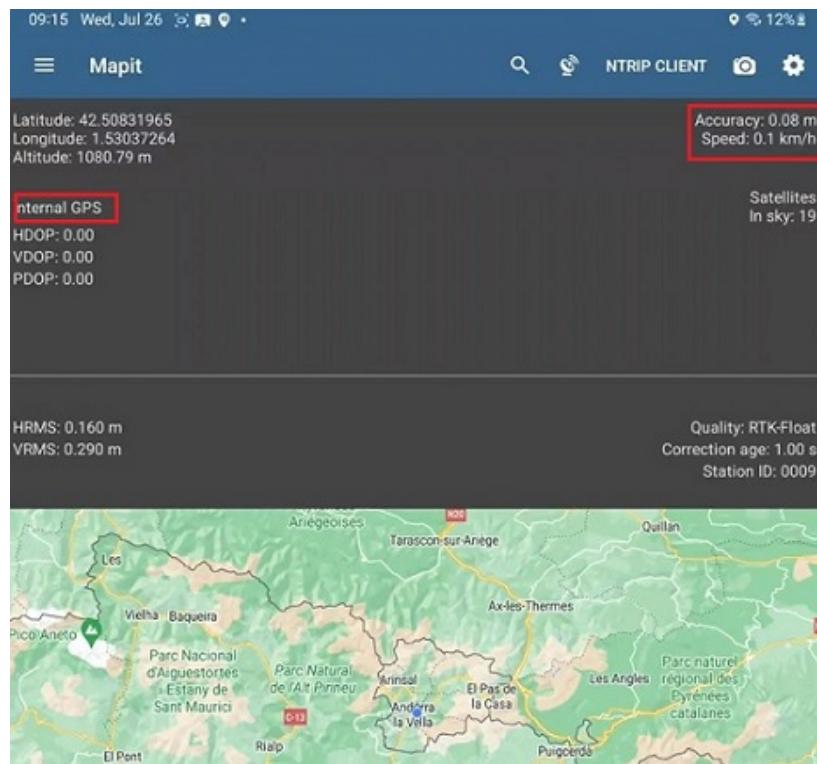

Now you are ready to map and survey in a variety of applications from agriculture and forestry to road construction, geology, land surveying with centimeter level accuracy on your Android device.

How to use RTK Handheld Surveyor Kit with Other software?

If you need to use Surveyor kit with any other software, in this instruction manual we will explain how to configure ArduSimple RTK receivers to be used as mock location for Android smartphones/tablets in order to get centimeter position accuracy.

If you are not familiar with the term, mock location means that you cheat your Android device to use an external GNSS receiver as if it was its own internal one. This has the advantage that any GPS/GNSS app that works with your Android device can benefit of centimeter level accuracy.


Firstly, install GNSS Master app and enable mock location in your Android Device.

This step only needs to be done once.


1. Install GNSS Master app on your Android device from the Google Play Store. When you first open the app, you will be asked to allow certain permissions to GNSS Master.
 - Location Permission
 - Display Notifications

Once you accept the permissions, the *Status* page will load, showing the current status of the app. We will configure it later.

2. To enable mock locations in Android we will need to get Developer permissions. The procedure may vary slightly between different Android versions and smartphone models (you can Google your **“Smartphone model + enable mock location”** if you can't find the exact options).
3. On Android 4.1 and lower, the **Developer options** screen is available by default. On Android 4.2 and higher, you must enable this screen. To enable developer options, tap the **Build Number, MIUI version or similar** option 7 times.

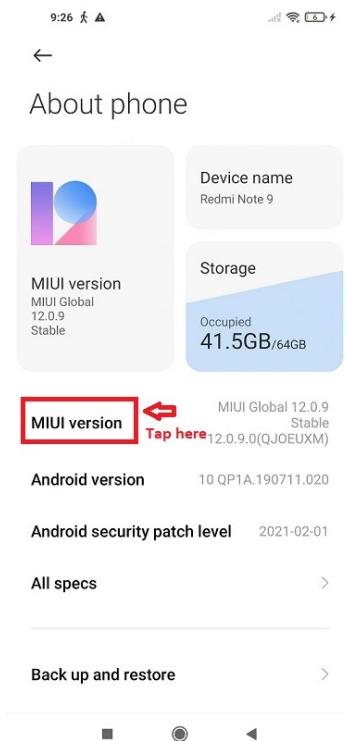

4. You can find this option in one of the following locations, depending on your Android version:
 - **Settings → About Phone → Build Number**
 - **Settings → System → About Phone → Build Number**
5. Once you have access to Developer options, you can go to **Settings → Additional Settings** and at the bottom you will find Developer options. In this big list, tap **Select mock location app** and select **GNSS Master** from the list.

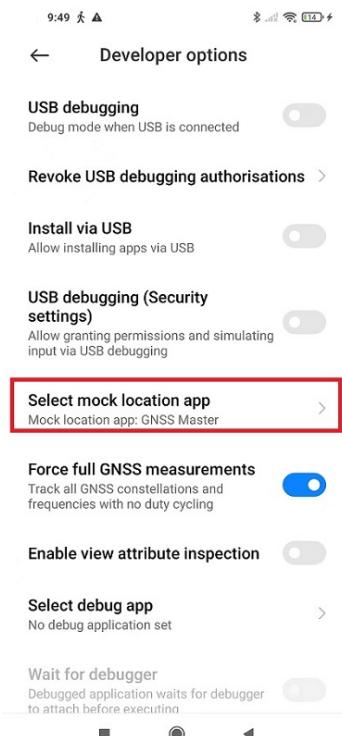

6. Connect the [GNSS antenna](#) to your device, in a location with good view of the sky, or near a window for testing the functionality.

Secondly, connect the RTK receiver to your Android device.


Connection via USB OTG

Connection via Bluetooth


Connection via USB OTG

The best option (if your device supports it) since you can power and communicate with it at the same time.

7. Connect [RTK receiver](#) with your Android device with [USB OTG cable](#).
8. Open GNSS Master app. Check Mock Location and Output to SW Maps.

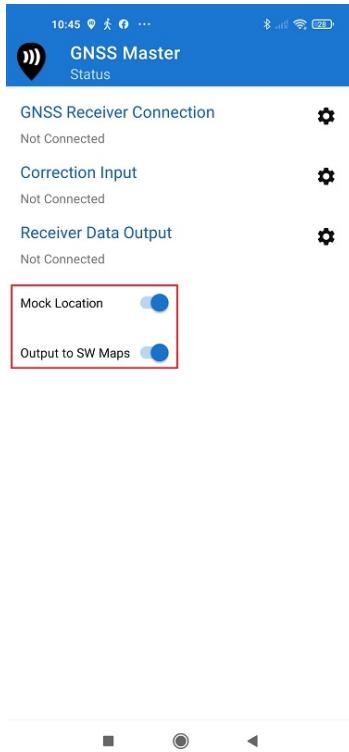

- Click the gear icon on the right side of **GNSS Receiver Connection** to enter the setup menu.

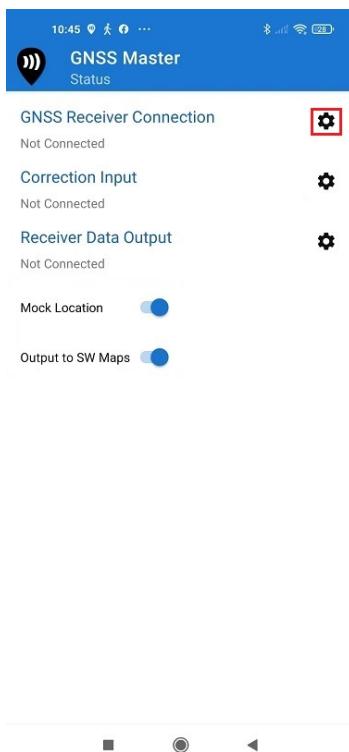


10. Choose **USB Serial** at Mode. Set **Baud Rate** to 115200 bps (if you ordered your ArduSimple Professional kit before 09.10.2023, set Baud Rate to 38400 bps. If you use a different receiver, the Baud Rate should match with your receiver configuration). At **Connected USB Device**, it will automatically recognize your receiver with name ******* USB UART**.




11. Press **CONNECT**.

Connection via Bluetooth


7. Power your [RTK receiver](#) by connecting USB cable to the power supply (smartphone/tablet/ compatible powerbank). If you get any popup message to connect the USB device with any app, you can ignore it.
8. Enable your smartphone/tablet Bluetooth, and pair it with your [RTK receiver](#). When pairing your device, notice that it may appear as **RTK_GNSS_***** or as a generic MAC number (e.g.: F0:0A:95:9D:68:16). The password is always 1234. *The pairing only needs to be done once.*

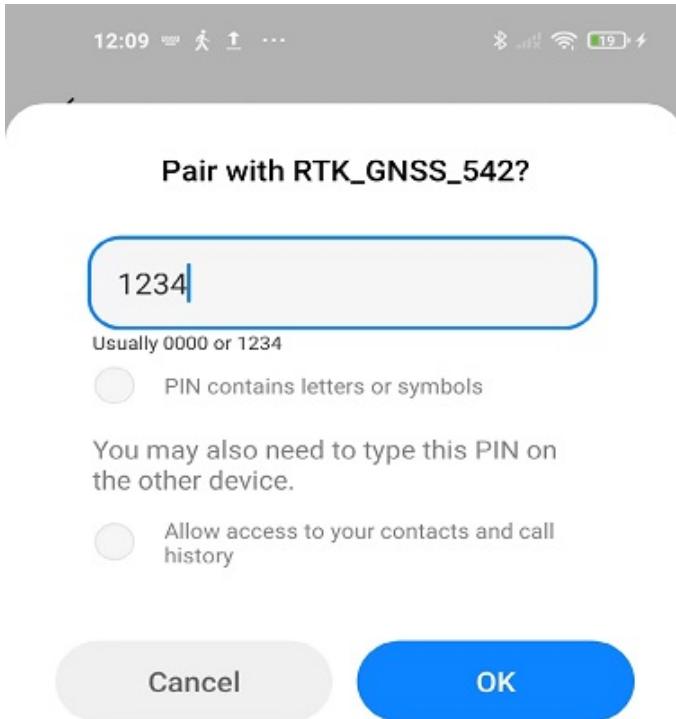

9. Open GNSS Master app. Check Mock Location and Output to SW Maps.

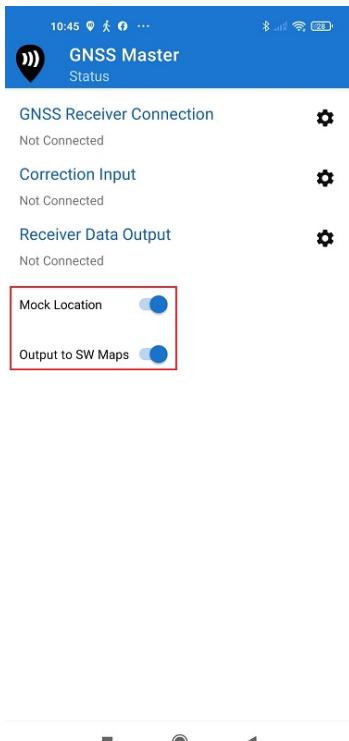


10. Click the gear icon on the right side of **GNSS Receiver Connection** to enter the setup menu.

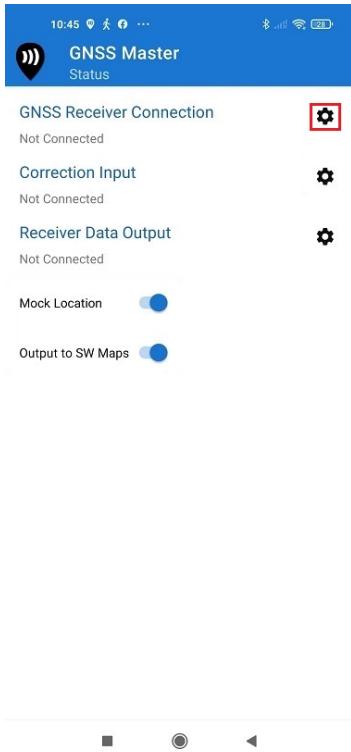


11. Choose **Bluetooth** at Mode.

In Paired Devices chose the one you paired in step 8.


Press **CONNECT**.

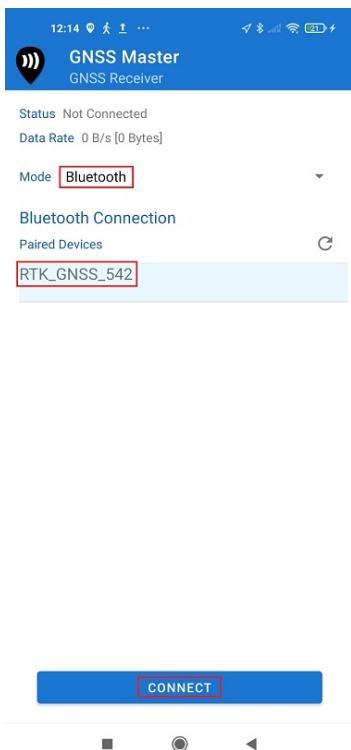

12. Go back to main menu. Now you should see in GNSS Receiver Connection it says Connected and with data transfer.

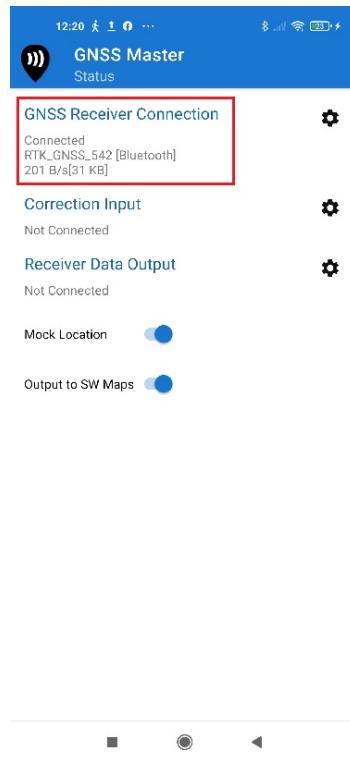


13. Open **Correction Input** by clicking on the gear icon.

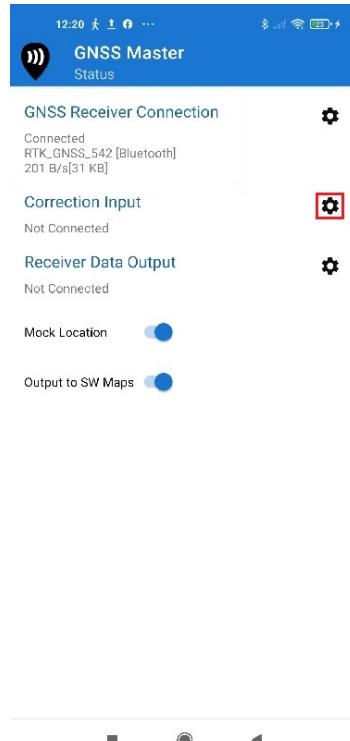


14. In **Mode** choose **NTRIP Client** and press the **+** button next to NTRIP Connections.




15. Set your NTRIP Client credentials (Caster IP, Caster Port, Username and Password). If you don't know how to do it, have a look at this [tutorial](#). Press **SAVE**.

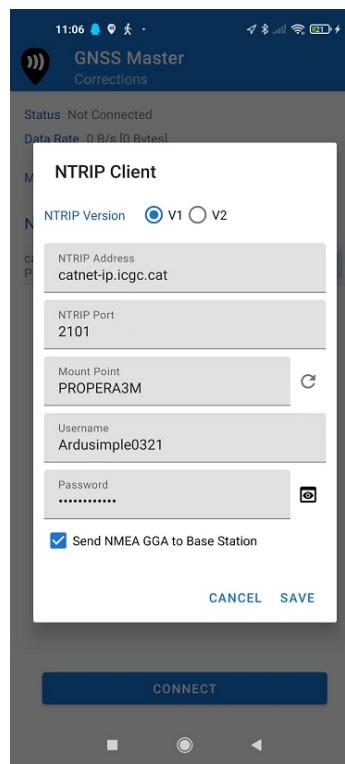

16. Press **CONNECT**. In Status you will see **GNSS Receiver Connection** and **Correction Input** showing Connected and with data communication.

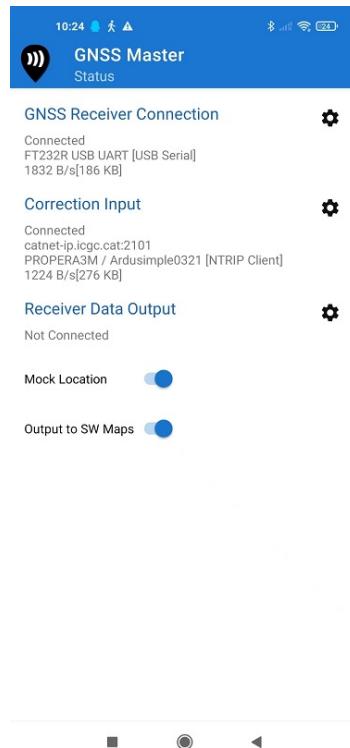


17. You can check your location and available satellites in Skyplot.

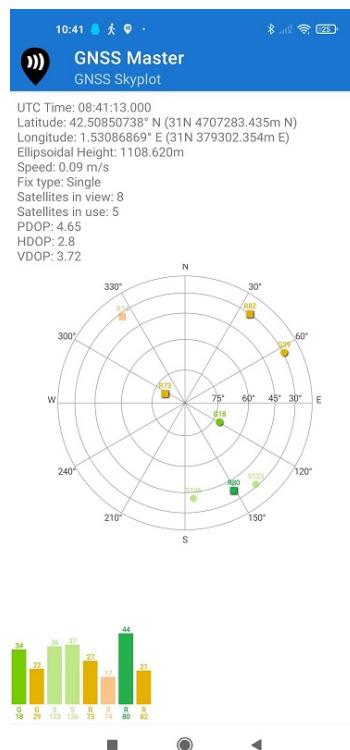

18. Open your favorite GPS/GNSS application and use it as usual.

You will be using the external RTK GNSS receiver instead of the smartphone/tablet internal GPS receiver. Following image is the example of SW Maps.

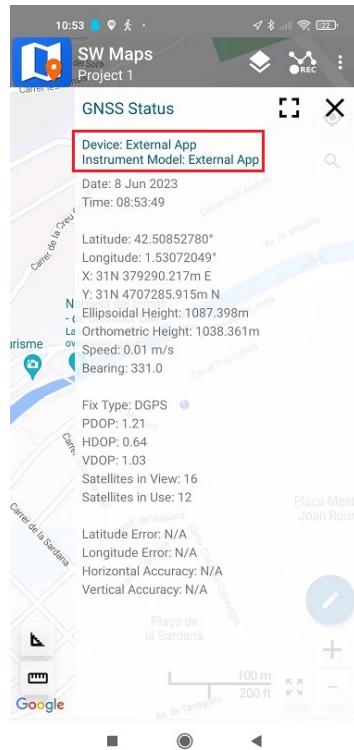

19. We have tested this functionality with many apps, you can find them in this [link](#).

If you test it in other apps, you can send us an email at info@ardusimple.com and we will add it to the list.

The Android robot is reproduced or modified from work created and shared by Google and used according to terms described in the [Creative Commons 3.0 Attribution License](#).


Related tutorials

- [How to connect low cost RTK kit to Carlson SurvPC for archaeological surveying](#)
- [How to use centimeter GPS with any Android app \(mock location\)](#)
- [How to connect ArduSimple kit to Mergin Maps for centimeter-accurate mapping](#)
- [Mock location with USB OTG](#)
- [How to configure your simpleRTK2B receiver on your Android smartphone via GNSS master?](#)
- [How to export your survey work from your Android device to QGIS and AutoCAD](#)
- [How to use custom geoid for orthometric height measurements in Android with Mapit GIS or Mapit Spatial](#)
- [How to use ArduSimple products with SW Maps on Android smartphones/tablets](#)

How to reset the kit to Factory settings?

The kit is pre-configured to send NMEA data simultaneously via Bluetooth and USB. If you change any settings and the product stops working, you can revert to factory setting by following these steps:

1. Connect the receiver with your computer or PC via the USB.
2. Run u-blox u-center (you can download it [here](#)) and connect to the proper COM port.
3. Go to **View ->Message View** and navigate to **UBX->MON->VER**.
4. You can read the firmware version in the window:

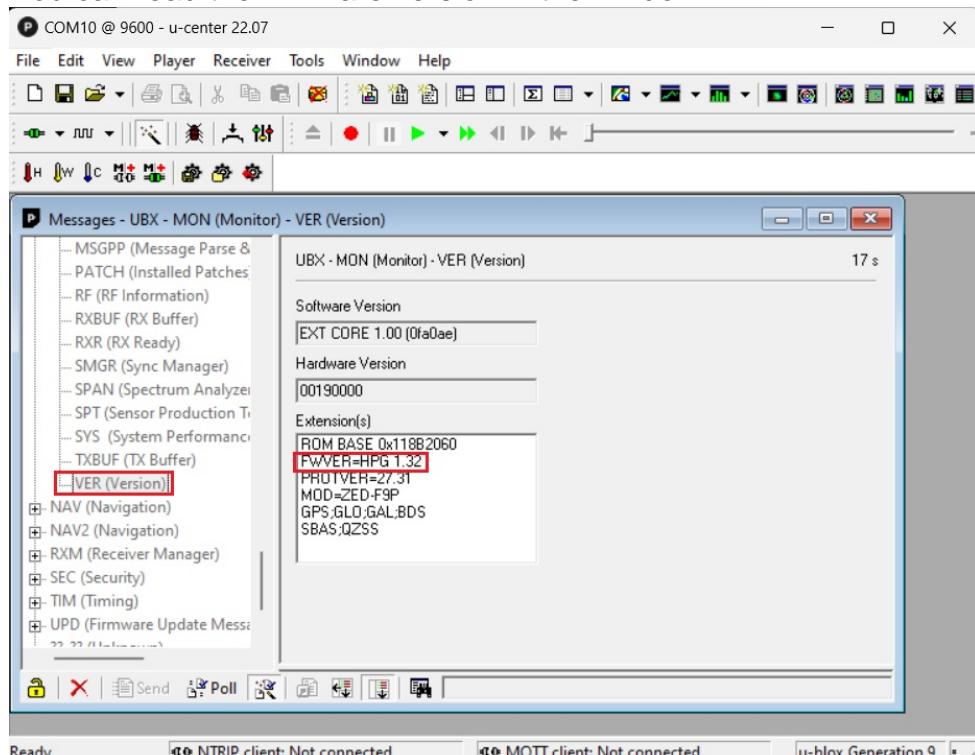

5. Download configuration file:
 - o [simpleRTK2B_FW132_Bluetooth_00.txt](#) if your firmware version is 1.32
 - o [simpleRTK2B_FW113_Bluetooth-00.txt](#) if your firmware version is 1.13
6. In u-center **Open Tools -> Receiver Configuration**, pick your file that you dowload on the previous step and click **Transfer File -> GNSS** button.
7. Once the configuration is done, go to **Receiver->Action->Save Config** to save the configuration of the RTK receiver

Accessories

Here you can find affordable accessories for [RTK Handheld Surveyor Kit](#).



Cables
[USB-C on-the-go \(OTG\) with external USB-C power supply](#)



Made in Europe
Accessories
[Waterproof Transport Case IP67](#)

EU Conformity & RoHS Certificates

[Here you will find a summary of the EU Conformity Certificates of all our products.](#)